

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

5,000 Miles or 4 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

10,000 Miles or 8 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

7,500 Miles or 6 Months

- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

15,000 Miles or 12 Months

15,000 Miles or 12 Months

- Replace engine oil and oil filter
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Exhaust pipes and mountings
 - Front differential oil (all 4WD except Highlander and RAV4)
 - Rotate tires
 - Limited-slip differential oil (Land Cruiser, 4WD Highlander, 4WD RAV4)²
 - Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - Steering gear box
 - Steering linkage and boots
 - Transfer case oil (4WD Highlander, 4WD RAV4)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect automatic transmission fluid (Land Cruiser, Sequoia, Tacoma, Tundra, 4Runner)
- Inspect engine air filter
- Inspect nuts and bolts on chassis and body
- Replace automatic transmission fluid (Tundra)
- Replace front differential oil (all 4WD except Highlander and RAV4)
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD Highlander, 4WD RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

TOYOTA
GENUINE PARTS

¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² If vehicle is equipped with limited-slip differential.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

20,000 Miles or 16 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

25,000 Miles or 20 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

22,500 Miles or 18 Months

- Replace air conditioning filter (RAV4)²
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

30,000 Miles or 24 Months

30,000 Miles or 24 Months

- Replace engine air filter
- Replace engine oil and oil filter
- Replace engine coolant
- Rotate tires
- Replace limited-slip differential oil (Land Cruiser)³
- Replace non-platinum spark plugs (Sequoia, Tacoma, Tundra, 4Runner)⁴
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Lubricate wheel bearings and drive shaft bearings (Land Cruiser)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Fuel tank cap gasket
 - ___ Ball joints and dust covers
 - ___ Limited-slip differential oil (4WD Highlander, 4WD RAV4)³
 - ___ Brake lines and hoses
 - ___ Manual transmission oil (Tacoma, Tundra)
 - ___ Brake linings/drums and brake pads/discs
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Drive shaft boots (Land Cruiser; Highlander; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Steering gear box
 - ___ Exhaust pipes and mountings
 - ___ Steering linkage and boots
 - ___ Front differential oil (4WD models, Highlander, RAV4)
 - ___ Transfer case oil (4WD models)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect nuts and bolts on chassis and body
- Replace air conditioning filter (RAV4)
- Replace automatic transmission fluid (all models except Highlander and RAV4)
- Replace front differential oil (all 4WD except Highlander and RAV4 w/ automatic transmission; 2WD Highlander and 2WD RAV4 w/ manual transmission)
- Replace manual transmission oil
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD models)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

TOYOTA
QUALITY SERVICE

¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² Do not replace if replaced at 20,000 miles/16 months.

³ If vehicle is equipped with limited-slip differential.

⁴ Required under the terms of the Emission Control Warranty.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

35,000 Miles or 28 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

40,000 Miles or 32 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

37,500 Miles or 30 Months

- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

45,000 Miles or 36 Months

45,000 Miles or 36 Months

- Replace engine oil and oil filter
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)²
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (all 4WD except Highlander and RAV4)
 - ___ Rotate tires
 - ___ Limited-slip differential oil (Land Cruiser, 4WD Highlander, 4WD RAV4)³
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD Highlander, 4WD RAV4)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect automatic transmission fluid (Land Cruiser, Sequoia, Tacoma, Tundra, 4Runner)
- Inspect engine air filter
- Inspect nuts and bolts on chassis and body
- Replace automatic transmission fluid (Tundra)
- Replace front differential oil (all 4WD except Highlander and RAV4)
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD Highlander, 4WD RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____



¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² Do not replace if replaced at 40,000 miles/32 months.

³ If vehicle is equipped with limited-slip differential.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

50,000 Miles or 40 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

55,000 Miles or 44 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

52,500 Miles or 42 Months

- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

60,000 Miles or 48 Months

60,000 Miles or 48 Months

- | | |
|--|---|
| <input type="checkbox"/> Replace engine air filter | <input type="checkbox"/> Replace engine oil and oil filter |
| <input type="checkbox"/> Replace engine coolant | <input type="checkbox"/> Rotate tires |
| <input type="checkbox"/> Replace limited-slip differential oil (Highlander, Land Cruiser, RAV4) ² | |
| <input type="checkbox"/> Replace non-platinum spark plugs (Sequoia, Tacoma, Tundra, 4Runner) ³ | |
| <input type="checkbox"/> Lubricate propeller shaft (all 4WD except Highlander and RAV4) | |
| <input type="checkbox"/> Lubricate wheel bearings and drive shaft bearings (Land Cruiser) | |
| <input type="checkbox"/> Re-torque drive shaft bolt (Highlander, 4WD RAV4) | |
| <input type="checkbox"/> Re-torque propeller shaft bolt (all models except Highlander and RAV4) | |
| <input type="checkbox"/> Inspect the following: | |
| ___ Automatic transmission fluid | ___ Exhaust pipes and mountings |
| ___ Ball joints and dust covers | ___ Front differential oil (4WD models, Highlander, RAV4) |
| ___ Brake lines and hoses | ___ Fuel tank cap gasket |
| ___ Brake linings/drums and brake pads/discs | ___ Manual transmission oil (Tacoma, Tundra) |
| ___ Charcoal canister (all models except Highlander and RAV4) ⁴ | ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4) |
| ___ Drive belts ⁵ | ___ Steering gear box |
| ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner) | ___ Steering linkage and boots |
| ___ Engine valve clearance | ___ Transfer case oil (4WD models) |
| ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | |

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect nuts and bolts on chassis and body
- Replace air conditioning filter (RAV4)
- Replace front differential oil
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD models)
- Replace transmission fluid or oil

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____



¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² If vehicle is equipped with limited-slip differential.

³ Required under the terms of the Emission Control Warranty.

⁴ Inspect at 60,000 miles or 72 months, whichever comes first. Required only for vehicles in California, Massachusetts and New York.

⁵ Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

65,000 Miles or 52 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

70,000 Miles or 56 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

67,500 Miles or 54 Months

- Replace air conditioning filter (RAV4)²
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

75,000 Miles or 60 Months

75,000 Miles or 60 Months

- Replace engine oil and oil filter
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive belts
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (all 4WD except Highlander and RAV4)
 - ___ Rotate tires
 - ___ Limited-slip differential oil (Land Cruiser, 4WD Highlander, 4WD RAV4)³
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD Highlander, 4WD RAV4)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect automatic transmission fluid (Land Cruiser, Sequoia, Tacoma, Tundra, 4Runner)
- Inspect engine air filter
- Inspect nuts and bolts on chassis and body
- Replace automatic transmission fluid (Tundra)
- Replace front differential oil (all 4WD except Highlander and RAV4)
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD Highlander, 4WD RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

TOYOTA
GENUINE PARTS

¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² Do not replace if replaced at 60,000 miles/48 months.

³ If vehicle is equipped with limited-slip differential.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

80,000 Miles or 64 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

85,000 Miles or 68 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

82,500 Miles or 66 Months

- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

90,000 Miles or 72 Months

90,000 Miles or 72 Months

- Replace engine air filter
- Replace engine coolant
- Replace limited-slip differential oil (Land Cruiser)²
- Replace non-platinum spark plugs (Sequoia, Tacoma, Tundra, 4Runner)³
- Replace timing belt (except RAV4, 4-cyl. Highlander and 4-cyl. Tacoma)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Lubricate wheel bearings and drive shaft bearings (Land Cruiser)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)
- Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive belts
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Exhaust pipes and mountings
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Front differential oil (4WD models, Highlander, RAV4)
 - ___ Limited-slip differential oil (4WD Highlander, 4WD RAV4)²
 - ___ Manual transmission oil (Tacoma, Tundra)
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD models)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect nuts and bolts on chassis and body
- Replace automatic transmission fluid (all models except Highlander and RAV4)
- Replace front differential oil (all 4WD except Highlander and RAV4 w/ automatic transmission; 2WD Highlander and 2WD RAV4 w/ manual transmission)
- Replace manual transmission oil
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD models)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

TOYOTA

QUALITY SERVICE

¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² If vehicle is equipped with limited-slip differential.

³ Required under the terms of the Emission Control Warranty.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

95,000 Miles or 76 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

100,000 Miles or 80 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

97,500 Miles or 78 Months

- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

105,000 Miles or 84 Months

105,000 Miles or 84 Months

- Replace engine oil and oil filter
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive belts
 - ___ Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (all 4WD except Highlander and RAV4)
 - ___ Limited-slip differential oil (Land Cruiser, 4WD Highlander, 4WD RAV4)²
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD Highlander, 4WD RAV4)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect automatic transmission fluid (Land Cruiser, Sequoia, Tacoma, Tundra, 4Runner)
- Inspect engine air filter
- Inspect nuts and bolts on chassis and body
- Replace automatic transmission fluid (Tundra)
- Replace front differential oil (all 4WD except Highlander and RAV4)
- Replace rear differential oil (including limited-slip)
- Replace transfer case oil (4WD Highlander, 4WD RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____



¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² If vehicle is equipped with limited-slip differential.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 17.

110,000 Miles or 88 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Replace air conditioning filter (RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

115,000 Miles or 92 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
 - Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots (Highlander; Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots
- Rotate tires
- Replace rear differential oil (Sequoia)
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

112,500 Miles or 90 Months

- Replace air conditioning filter (RAV4)²
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

120,000 Miles or 96 Months

120,000 Miles or 96 Months

- Replace engine air filter
- Replace engine oil and oil filter
- Replace engine coolant
- Rotate tires
- Replace limited-slip differential oil (Highlander, Land Cruiser, RAV4)³
- Replace spark plugs (all models)⁴
- Lubricate propeller shaft (all 4WD except Highlander and RAV4)
- Lubricate wheel bearings and drive shaft bearings (Land Cruiser)
- Re-torque drive shaft bolt (Highlander, 4WD RAV4)
- Re-torque propeller shaft bolt (all models except Highlander and RAV4)
- Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Exhaust pipes and mountings
 - ___ Ball joints and dust covers
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Brake lines and hoses
 - ___ Fuel tank cap gasket
 - ___ Brake linings/drums and brake pads/discs
 - ___ Manual transmission oil (Tacoma, Tundra)
 - ___ Charcoal canister (all models except Highlander and RAV4)⁵
 - ___ Rear differential oil (all models except 2WD Highlander and 2WD RAV4)
 - ___ Drive belts
 - ___ Steering gear box
 - ___ Drive shaft boots (Highlander, Land Cruiser; RAV4; 4WD Tacoma, Tundra and 4Runner)
 - ___ Steering linkage and boots
 - ___ Engine valve clearance
 - ___ Transfer case oil (4WD models)
 - ___ Front differential oil (4WD models, Highlander, RAV4)

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect nuts and bolts on chassis and body
- Replace air conditioning filter (RAV4)
- Replace front differential oil
- Replace rear differential oil (including limited-slip)
- Replace transmission fluid or oil
- Replace transfer case oil (4WD models)

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____



¹ Specific services apply to specific operating conditions. See pages 18–19 for details.

² Do not replace if replaced at 110,000 miles/88 months.

³ If vehicle is equipped with limited-slip differential.

⁴ Required under the terms of the Emission Control Warranty.

⁵ Inspect at 120,000 miles or 144 months, whichever comes first. Required only for vehicles in California, Massachusetts and New York.