

2004
Scheduled
Maintenance Guide



PASSPORT

TO PERFORMANCE

FOLLOWING THE CHARTS

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of approximately 833 miles per month. If you drive more than 833 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

The maintenance log charts are colored differently for cars and SUVs/trucks. Charts for cars have dark blue bars and charts for SUVs/trucks have gold bars. Be sure to follow the appropriate charts for your vehicle.

MAINTENANCE LOG: CARS

5,000 Miles or 6 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

10,000 Miles or 12 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

15,000 Miles or 18 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Steering gear box
 - Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Inspect automatic transmission fluid (Avalon)
- Inspect differential oil (Avalon)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

MAINTENANCE LOG: CARS

20,000 Miles or 24 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

25,000 Miles or 30 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

30,000 Miles or 36 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Replace spark plugs (ECHO)²
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Brake linings/drums and brake pads/discs³
 - Differential oil
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - Fuel tank cap gasket
 - Radiator core and condenser
 - Steering gear box
 - Steering linkage and boots
 - Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace automatic transmission fluid (Avalon)
- Replace differential oil (Avalon and models with integrated manual transmission)
- Replace manual transmission oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

² Required under the terms of the Emission Control Warranty.

³ Inspect thickness measurement and disc runout.

MAINTENANCE LOG: CARS

35,000 Miles or 42 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

40,000 Miles or 48 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

45,000 Miles or 54 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Steering gear box
 - Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Inspect automatic transmission fluid (Avalon)
- Inspect differential oil (Avalon)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

MAINTENANCE LOG: CARS

50,000 Miles or 60 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

55,000 Miles or 66 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

60,000 Miles or 72 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Replace spark plugs (ECHO)²
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Brake linings/drums and brake pads/discs³
 - Differential oil
 - Drive belts⁴
 - Drive shaft boots
 - Engine coolant
 - Engine valve clearance
 - Exhaust pipes and mountings
 - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - Fuel tank cap gasket
 - Radiator core and condenser
 - Steering gear box
 - Steering linkage and boots
 - Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace differential oil (Avalon and models with integrated manual transmission)
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

² Required under the terms of the Emission Control Warranty.

³ Inspect thickness measurement and disc runout.

⁴ Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

MAINTENANCE LOG: CARS

65,000 Miles or 78 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

70,000 Miles or 84 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

75,000 Miles or 90 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Drive belts
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Steering gear box
 - Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Inspect automatic transmission fluid (Avalon)
- Inspect differential oil (Avalon)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

MAINTENANCE LOG: CARS

80,000 Miles or 96 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

85,000 Miles or 102 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

90,000 Miles or 108 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Replace spark plugs (ECHO)²
- Replace timing belt (Avalon, Camry with 1MZ-FE or 3MZ-FE, Camry Solara with 3MZ-FE)
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Brake linings/drums and brake pads/discs³
 - Differential oil
 - Drive belts
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - Fuel tank cap gasket
 - Radiator core and condenser
 - Steering gear box
 - Steering linkage and boots
 - Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace differential oil (Avalon and models with integrated manual transmission)
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

² Required under the terms of the Emission Control Warranty.

³ Inspect thickness measurement and disc runout.

MAINTENANCE LOG: CARS

95,000 Miles or 114 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

100,000 Miles or 120 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Replace engine coolant²
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

105,000 Miles or 126 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Drive belts
 - Drive shaft boots
 - Engine coolant
 - Exhaust pipes and mountings
 - Steering gear box
 - Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Inspect automatic transmission fluid (Avalon)
- Inspect differential oil (Avalon)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

² Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See page 37 for additional information.

MAINTENANCE LOG: CARS

110,000 Miles or 132 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

115,000 Miles or 138 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

Driving while towing:

- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG: CARS

120,000 Miles or 144 Months

- Replace engine oil and oil filter¹
- Rotate tires (except MR2 Spyder)
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Replace spark plugs²
- Inspect the following:
 - Ball joints and dust covers
 - Brake lines and hoses
 - Brake linings/drums and brake pads/discs³
 - Differential oil
 - Drive belts
 - Drive shaft boots
 - Engine coolant
 - Engine valve clearance
 - Exhaust pipes and mountings
 - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - Fuel tank cap gasket
 - Radiator core and condenser
 - Steering gear box
 - Steering linkage and boots
 - Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions

Driving in desert or on dirt roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace differential oil (Avalon and models with integrated manual transmission)
- Replace transmission fluid and oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

² Required under the terms of the Emission Control Warranty. Does not apply to PZEV models (Camry with 2AZ-FE and Prius) in California, New York, Massachusetts, Maine and Vermont. For these models, replacement interval is 150,000 miles.

³ Inspect thickness measurement and disc runout.