



moving forward ▶

TACOMA

2008
Scheduled Maintenance Guide

MAINTENANCE LOG

5,000 Miles or 6 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

10,000 Miles or 12 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

15,000 Miles or 18 months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Inspect the following:

- | | |
|--|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Front differential oil (4WD) |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Rear differential oil |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Steering linkage and boots |

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

MAINTENANCE LOG

20,000 Miles or 24 months

- Replace cabin air filter
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

25,000 Miles or 30 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

30,000 Miles or 36 months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine air filter
- Replace engine oil and oil filter ¹
- Replace rear differential oil (Prerunner and 4WD vehicles with optional limited slip differential only)
- Replace spark plugs (1GR-FE engine) ⁵
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs ⁶

Inspect the following:

- Ball joints and dust covers
- Brake lines and hoses
- Drive shaft boots (4WD)
- Engine coolant ³
- Exhaust pipes and mountings
- Front differential oil (4WD)
- Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
- Fuel tank cap gasket
- Radiator and condenser
- Rear differential oil (except Prerunner and 4WD vehicles with optional limited slip differential)
- Steering gear box
- Steering linkage and boots
- Transfer case oil (4WD)
- Transmission fluid or oil

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace manual transmission oil
- Replace rear differential oil
- Replace transfer case oil (4WD)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

⁵ Maintenance services of spark plugs are required under the terms of the Emissions Control Warranty.

⁶ Inspect thickness measurement and disc runout.

MAINTENANCE LOG

35,000 Miles or 42 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

40,000 Miles or 48 months

- Replace cabin air filter
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

45,000 Miles or 54 months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Inspect the following:

- | | |
|--|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Front differential oil (4WD) |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Rear differential oil |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Steering linkage and boots |

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

MAINTENANCE LOG

50,000 Miles or 60 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

55,000 Miles or 66 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

60,000 Miles or 72 months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace cabin air filter
- Replace engine air filter
- Replace engine oil and oil filter ¹
- Replace rear differential oil (Prerunner and 4WD vehicles with optional limited slip differential only)
- Replace spark plugs (1GR-FE engine) ⁵
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs ⁶

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Fuel tank cap gasket |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive belts ⁷ | <input type="checkbox"/> Rear differential oil (except Prerunner and 4WD vehicles with optional limited slip differential) |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering linkage and boots |
| <input type="checkbox"/> Engine valve clearance ⁸ | <input type="checkbox"/> Transfer case oil (4WD) |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Transmission fluid or oil |
| <input type="checkbox"/> Front differential oil (4WD) | |
| <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | |

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Replace transfer case oil (4WD)
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

⁵ Maintenance services of spark plugs are required under the terms of the Emissions Control Warranty.

⁶ Inspect thickness measurement and disc runout.

⁷ Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

⁸ Check for tappet noise and engine vibration and adjust if necessary, 1GR-FE engine only.

MAINTENANCE LOG

65,000 Miles or 78 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²**Driving on dirt roads or dusty roads:**

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

70,000 miles or 84 months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²**Driving on dirt roads or dusty roads:**

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

75,000 Miles or 90 Months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Inspect the following:

- | | |
|--|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Front differential oil (4WD) |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Rear differential oil |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering linkage and boots |
| <input type="checkbox"/> Exhaust pipes and mountings | |

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

MAINTENANCE LOG

80,000 Miles or 96 Months

- Replace cabin air filter
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

85,000 Miles or 102 Months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

90,000 Miles or 108 Months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine air filter
- Replace engine oil and oil filter ¹
- Replace rear differential oil (Prerunner and 4WD vehicles with optional limited slip differential only)
- Replace spark plugs (1GR-FE engine) ⁵
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs ⁶

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Fuel tank cap gasket |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Rear differential oil (except Prerunner and 4WD vehicles with optional limited slip differential) |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering linkage and boots |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Transfer case oil (4WD) |
| <input type="checkbox"/> Front differential oil (4WD) | <input type="checkbox"/> Transmission fluid or oil |
| <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | |

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace manual transmission oil
- Replace rear differential oil
- Replace transfer case oil (4WD)
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

⁵ Maintenance services of spark plugs are required under the terms of the Emissions Control Warranty.

⁶ Inspect thickness measurement and disc runout.

MAINTENANCE LOG

95,000 Miles or 114 Months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

100,000 Miles or 120 Months

- Replace cabin air filter
- Replace engine coolant ⁵
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

105,000 Miles or 126 Months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Inspect the following:

- | | |
|--|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Front differential oil (4WD) |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Rear differential oil |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering linkage and boots |
| <input type="checkbox"/> Exhaust pipes and mountings | |

NOTE: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

⁵ Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

MAINTENANCE LOG

110,000 Miles or 132 Months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

115,000 Miles or 138 Months

- Replace engine oil and oil filter ¹
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Inspect ball joints and dust covers
- Inspect drive shaft boots (4WD)
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

Driving while towing:

- Lubricate propeller shaft (4WD) ⁴
- Re-torque propeller shaft bolt ⁴
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

MAINTENANCE LOG

120,000 Miles or 144 Months

- Lubricate propeller shaft (4WD)
- Re-torque propeller shaft bolt
- Replace cabin air filter
- Replace engine air filter
- Replace engine oil and oil filter ¹
- Replace rear differential oil (Prerunner and 4WD vehicles with optional limited slip differential only)
- Replace spark plugs ⁵
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs ⁶

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Fuel tank cap gasket |
| <input type="checkbox"/> Brake lines and hoses | <input type="checkbox"/> Radiator and condenser |
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Rear differential oil (except Prerunner and 4WD vehicles with optional limited slip differential) |
| <input type="checkbox"/> Drive shaft boots (4WD) | <input type="checkbox"/> Steering gear box |
| <input type="checkbox"/> Engine coolant ³ | <input type="checkbox"/> Steering linkage and boots |
| <input type="checkbox"/> Engine valve clearance ⁷ | <input type="checkbox"/> Transfer case oil (4WD) |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Transmission fluid or oil |
| <input type="checkbox"/> Front differential oil (4WD) | |
| <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | |

Additional Maintenance Items for Special Operating Conditions ²

Driving on dirt roads or dusty roads:

- Tighten nuts and bolts on chassis

Driving while towing:

- Replace front differential oil (4WD)
- Replace rear differential oil
- Replace transfer case oil (4WD)
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.

⁴ Includes operating on roads which road salt has been applied.

⁵ Maintenance services of spark plugs are required under the terms of the Emissions Control Warranty.

⁶ Inspect thickness measurement and disc runout.

⁷ Check for tappet noise and engine vibration and adjust if necessary, 1GR-FE engine only.