

2013 PRE-DELIVERY SERVICE CHECK SHEET

July 2012 Adjust/ Repair **BEFORE INSPECTION UNDER VEHICLE (ON HOIST)** 01 Install short pin - see page 2 01 Remove disc brake anti-rust covers/anti-corrosion 02 Initialize power sliding door* - see page 2 wheel film..... 03 Initialize power back door* - see page 2..... 02 Inspect tires for defects/damage (including spare tire*) ... 04 Initialize Rear View Monitor System* 03 Initialize Tire Pressure Warning System (TPWS) - see page 2 04 Install wheel covers/caps/spare tire wheel covers* **FUNCTIONAL OPERATION** 05 Inspect for fuel, oil, coolant, and other fluid leaks 06 Inspect under the vehicle for damage, rust, etc. Apply parking brake and cycle ignition "IG-ON"; place gear selector in reverse; turn 07 Visually check bolts and nuts on chassis and powertrain on lights and rear defogger. Unlock doors; release fuel door. for looseness..... 01 Check dome, courtesy, map, and sun visor lights* 08 Install rubber body plugs (stored in glove box or center console)* 02 Check warning/indicator lights, gauges, and horn..... 03 Check windshield wipers and washers ROAD TEST 04 Check headlights, instrument lights, turn signals, A complete road test helps assure customer satisfaction. Drive vehicle over a emergency flashers, and brake lights variety of road surfaces and driving conditions. Check for unusual noise and 05 Check inside/outside rear view mirror operation/ driving performance. adjustment 06 Check cigarette lighter* and power outlets..... **Enter Odometer Readings** 07 Check sliding roof(s)* Reading Before Test: __ Reading After Test 08 Check audio/navigation*/backup camera* systems and set clock..... 01 Check cold engine operation 09 Check Rear Seat Entertainment System operation* 02 Check engine operation during warm up 10 Check Automatic Door Lock (ADL) function* 03 Check engine at normal operating temperature..... 04 Check automatic transmission operation 11 Install shift-lock override button cover 05 Check brake and parking brake operation 12 Check Auto Access Seat*..... 06 Check steering operation & off-center/vehicle pull/flutter 07 Inspect for abnormal noise and vibration WALKAROUND INSPECTION 08 Inspect for squeaks and rattles..... Start at left front door. Check window and door lock operation (from master power 09 Check front and rear* heater and A/C operation..... switch, if equipped). Continue around vehicle in a counterclockwise direction 10 Check cruise control operation*..... checking each door and window operation, child door locks, seat belts, interior 11 Check front seat heater/ventilation operation* condition, all lights, luggage compartment contents. Finish by checking headlight 12 Set/calibrate compass* - see page 2..... aim and continue into UNDER HOOD checks. FINAL INSPECTION AND CLEANING 01 Check Smart Key System*..... 02 Check door and door lock operation, including each 01 Remove interior protective covers, unnecessary labels, wireless remote control/theft deterrent system*..... tags, etc. (Remove just before delivery to customer) 03 Check window operation..... 02 Visually inspect all interior parts for installation, 04 Check that engine starts with all keys damage, fit, dirt, etc. 05 Check that child safety door locks are in normal 03 Verify floor mat application and install using (unlocked) position..... retaining clips* 06 Check seats and seat belt operation..... 04 Verify green light is illuminated on SOS (Safety Connect) 07 Check rear defogger/rear view mirror defogger*..... button..... 05 Remove Rapgard™ and clear protective bumper film*... 08 Check side marker, tail, backup, and license plate lights 06 Wash and clean vehicle 09 Check luggage compartment light* and trim appearance 07 Inspect paint finish for scratches, chips, rust, dents, 10 Adjust spare tire pressure* & check jack & tool installation damage, etc. 11 Check headlight aim 08 Inspect exterior body parts for proper installation, damage, rust, etc. **UNDER HOOD** 09 Place oil change sticker on inside of windshield, top 01 Check engine oil level and ATM fluid levels left corner..... 02 Check brake and power steering fluid levels..... 10 Place owner's guide & first aid kit portfolio* in glove box 03 Check engine coolant level 11 Install front license plate and mounting bracket* - see 04 Check windshield washer fluid level..... page 2 \Box 05 Check battery state-of-charge using Digital Battery 12 Perform Techstream Health Check System Analyzer (SOC Reading: ______%) 13 Install receiver towing hitch cap* 06 Inspect for fuel, oil, coolant, and other fluid leaks..... * Inspect or install when equipped/required. Completion and retention of this from is required to comply with Toyota's Warranty Policy. We hereby certify that all items TECHNICIAN'S SIGNATURE SERVICE MANAGER'S SIGNATURE on this form have been checked and corrected for proper NAME (PLEASE PRINT) NAME (PLEASE PRINT) operation as required. Date Dealer Name Dealer Code Vehicle Identification Number (Sticker)

SHORT PIN INSTALLATION


To minimize battery discharge the short pin has been removed and is stored in the engine compartment relay block. Install the short pin and confirm all related DTCs are cleared.

DTC Clearing Procedure

- 1. Connect Techstream to DLC3.
- 2. Cycle the ignition switch to the "IG-ON" position.
- 3. Using Techstream, check any other codes being output.

If any DTCs besides B1650 & B1794 remain, repair the applicable system according to the Repair Manual.

4. Erase DTCs (B1650 and B1794) and freeze frame data.

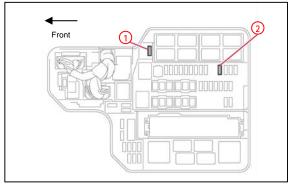

1 Storage Location

2 Installation Location

POWER SLIDING AND POWER BACK DOOR INITIALIZATION


As a result of the removal of the short pin, the "automatic open and close" and "jam protection" functions of the power sliding and power back door will be inoperative due to loss of the power back door position. Initialize the power back door after installing the short pin in its original location during Pre-Delivery Service (PDS).

Power Sliding Door

Refer to the Repair Manual for the Initialization procedure.

Power Back Door

Refer to the Repair Manual for the Initialization procedure.

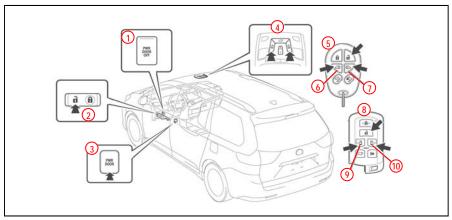

- **Power Door Main Switch**
- Power Sliding Door Satellite Switch
- PSD Button (LH) PSD Button (LH)
- 2 Door Control Switch
- 3 Power Sliding Door Switch
- 5 Transmitter Switch (w/o 7 PSD Button (PU) PSD Button (RH)
- Smart Key System)
 8 Transmitter Switch (w/Smart Key System) 10 PSD Button (RH)

TPWS INITIALIZATION

Refer to the Repair Manual for the Initialization procedure.

If performing this procedure in areas with temperature significantly colder or warmer than shop temperatures, follow the instructions in T-SB-0020-12.

COMPASS CALIBRATION

Refer to the Repair Manual for the Calibration procedure for vehicles equipped with a compass in the rear view mirror.

NOTE


- Do NOT perform calibration of the compass in a place where the Earth's magnetic field is subject to interference by artificial magnetic fields (underground parking, under a steel tower, between buildings, roof parking, near a railroad crossing, etc.).
- During calibration, do NOT operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

FRONT LICENSE PLATE AND MOUNTING BRACKET INSTALLATION

- 1. Insert the license plate into the front license plate bracket.
- 2. Align the installation holes on the front license plate mounting bracket and front license plate with the dimples on the front bumper.
- 3. Screw in the two (2) self-tapping screws directly into the dimples to install the front license plate and mounting bracket and the bumper.

NOTE

- Do NOT pre-drill holes into the bumper.
- Do NOT over tighten the self-tapping screws.

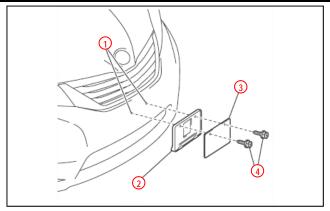

1 Dimples 2 Front License Plate Bracket 3 License Plate 4 Self-tapping Screws