

 Service Category
 Toyota Supports

 Section
 Pre-Delivery Service
 Market
 USA

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2014	Camry, Camry HV	

Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles has been a major focus for Toyota. To help remind customers that regular oil changes are essential to the proper maintenance of their vehicle, dealers are required to begin installing a first oil change reminder sticker prior to delivery. By doing this, customers will be reminded to return to your dealership for their first oil change. Your current oil change reminder sticker may be used. (See PDS Check Sheet item 9 of *"Final Inspection & Cleaning."*)

A new PDS <u>Check Sheet</u> has been developed for 2014 model year Camry vehicles. Some check points have been added, expanded, or clarified. **Bulletins are available for items in bold type.**

Warranty Policy

If the need for additional repairs or adjustment is noted during the Pre-Delivery Service, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed PDS check sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS must have time punch/flags for service. If multiple repairs are performed, separate time flags must be punched for each repair.

Reimbursement Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
001013	Camry Pre-Delivery Service	1.0	N/A	N/A	N/A
	Camry HV Pre-Delivery Service	1.5			

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream 2.0*		TS2UNIT	
TIS Techstream	ADE	TSPKG1	1
Techstream Lite		TSLITEDLR01	

* Essential SST.

NOTE

- Only ONE of the Techstream units listed above is required.
- Software version 8.20.019 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

Before Inspection

When performing new car Pre-Delivery Service, install Short Pin before moving vehicle from storage lot so that FUNCTIONAL OPERATION checks can begin as soon as vehicle is moved into the service stall.

1. Install Short Pin* – <u>T-SB-0100-13</u>

NOTE

The Short Pin is removed only on vehicles going to Hawaii, Puerto Rico, Saipan, Guam, and American Samoa.

Functional Operation

Apply parking brake and cycle ignition "ON," place gear selector in reverse, turn on lights and rear defogger. Unlock all doors, release fuel door.

- 1. Check dome, courtesy, map, and sun visor lights*
- 2. Check warning/indicator lights, gauges, and horn
- 3. Check windshield wipers and washers

Functional Operation (Continued)

- 4. Check headlights, instrument lights, turn signals, emergency flashers, and brake lights
- 5. Check inside/outside rear view mirror operation/adjustment*
- 6. Check cigarette lighter* and power outlets

Check the power outlet using an electrical accessory designed for this use.

7. Check audio/navigation*/backup camera* systems and set clock

For navigation, set the destination search area to the correct location.

- 8. Verify Entune/Navigation software version (Display Audio, Non-HDD Type only)* T-SB-0026-12
- 9. Check sliding roof*
- 10. Install shift-lock override button cover

Walkaround Inspection

Starting at the left front door, check window and door lock operation and the operation of all power windows and door locks from master switch, on vehicles so equipped. While walking around vehicle in a counterclockwise direction, open left rear door (if applicable) and check operation of window regulator and door lock, set child safety door locks to the normal (unlocked) position. Assure tightness of interior garnishes and check seat belts. Inspect lights at rear of vehicle. Repeat checks at right rear door. Inspect right front door window regulator and lock operation and garnishes. Check seats and seat belt operation. Continue on around to the front of the vehicle checking lights.

- 1. Check Smart Key System T-SB-0020-13
- 2. Check door and door lock operation, including each wireless remote control/theft deterrent system*
- 3. Check window operation
- 4. Check that engine starts with all keys
- 5. Check that child safety door locks are in normal (unlocked) position
- 6. Check seats and seat belt operation
- 7. Check rear defogger/rear view mirror defogger*
- 8. Check side marker, tail, backup, and license plate lights
- 9. Check luggage compartment light* and trim appearance

Walkaround Inspection (Continued)

10. Adjust spare tire pressure, inspect for damage, and check jack and tool installation

NOTE

Compact spare tire — 60 psi (420 kPa).

11. Check headlight aim

Refer to the Repair Manual for procedures.

Under Hood

- 1. Check engine oil level
- 2. Check brake fluid level
- 3. Check engine coolant level
- 4. Check inverter coolant level*
- 5. Check windshield washer fluid level
- 6. Check battery state-of-charge using Digital Battery System Analyzer

Refer to Service Bulletin No. <u>PG001-06</u>, "Battery Maintenance for In-Stock Vehicles & Pre-Delivery."

NOTE

Battery SOC should be a minimum of 75%. Please enter the SOC Reading on the space provided on the check sheet and attach the printout to the check sheet.

7. Inspect for fuel, oil, coolant, and other fluid leaks

Battery Maintenance*

1. Perform HV battery check and maintenance – T-SB-0026-13

Under Vehicle (On Hoist)

1. Remove disc brake anti-rust covers/anti-corrosion wheel film* - PD017-04

Visually inspect rotors for rust.

NOTE

For best rotor rust prevention, retain wheel film on vehicle until just prior to customer delivery.

2. Inspect tires for defects/damage

Under Vehicle (On Hoist) (Continued)

- 3. Verify Tire Pressure Warning System (TPWS) operation see check sheet
- 4. Install wheel covers/caps/spare tire wheel covers*
- 5. Check hybrid transmission fluid level*

Remove the filler plug and inspect the hybrid transmission fluid level.

- 6. Inspect for fuel, oil, coolant, and other fluid leaks
- 7. Inspect under the vehicle for damage, rust, etc.
- 8. Visually check bolts and nuts on chassis and powertrain for looseness
- 9. Install rubber body plugs (stored in glove box or center console)*

10. Install front wheel opening extension pads - see check sheet

Road Test

A complete road test helps assure customer satisfaction. Drive vehicle over a variety of road surfaces and driving conditions. Check for unusual noise and driving performance.

1. Check cold engine operation

Check starting and fast idle operation performance.

2. Check engine operation during warm-up

Check that engine operates smoothly during warm-up.

Check for unusual noise, engine vibration, rough idle, etc.

3. Check engine at normal operating temperature

Check engine performance over a broad range of driving conditions, including idle quality, acceleration, cruise, and deceleration.

4. Check transmission operation

Check transmission operation, including operation in each range, neutral start switch, and shift lock system.

5. Check brake and parking brake operation

Check brake function, including unusual noise, parking brake performance, and all related brake system indicator lights.

Road Test (Continued)

6. Check steering operation and off-center/vehicle pull/flutter

Check steering function.

Check steering off-center/vehicle pull/flutter.

- 7. Inspect for abnormal noise and vibration
- 8. Inspect for squeaks and rattles
- 9. Check Blind Spot Monitor System*

Check when the switch is "ON," the indicator is illuminated. Check when a vehicle is detected in the blind spot, the outside rear view mirror indicator on that side illuminates.

- 10. Check front and rear* heater and A/C operation
- 11. Check cruise control operation*

Check cruise control, including On-Off switch, "SET/COAST," "RESUME/ACCEL," and "CANCEL" functions.

- 12. Check front seat heater/ventilation operation*
- 13. Set/calibrate compass* see check sheet

Final Inspection & Cleaning

1. Remove interior protective covers, unnecessary labels, tags, etc. (Remove protective covers just before delivery to the customer)

Remove plastic covers from door panels, seats, head restraints, and sun visors, as required.

Remove labels, tags, and stickers (except those containing owner information).

NOTE

Consumer information labels, such as airbag information warning and bumper information labels, MUST be left on the vehicle until delivery to a retail customer.

- 2. Visually inspect all interior parts for installation, damage, fit, dirt, etc.
- 3. Verify floor mat application and install using retaining clips* <u>T-SB-0023-13</u>
- 4. Verify green light is illuminated on SOS (Safety Connect) button*
- 5. Remove Rapgard[™] and clear protective bumper film*

Ensure that ALL glue residue is removed.

6. Wash and clean vehicle

Final Inspection & Cleaning (Continued)

- 7. Inspect paint finish for scratches, chips, rust, dents, damage, etc.
- 8. Inspect exterior body parts for proper installation, damage, rust, etc.
- 9. Place oil change sticker on inside of windshield, top left corner

Complete the mileage or date recommendation and apply the oil change reminder sticker to the inside of the windshield, top left corner. You may use your current oil change reminder sticker.

- 10. Place Owner's Guide and first aid kit portfolio* in glove box
- 11. Perform Techstream Health Check

Perform a Health Check to ensure that diagnostic trouble codes are not present. Health Check results can be printed for the customer at delivery, or for the dealer file, using the Diagnostic Report function.

12. Install front license plate & mounting bracket* - see check sheet

* Inspect or install when equipped or required