Technical Service Information Bulletin

March 9, 2001

Title:

ECU FLASH REPROGRAMMING PROCESS

Models

Applicable Models

TSIB REVISION NOTICE:

- September 22, 2003: 2003 (and later) models added; Operation Procedures updated for CAN Interface Module with the latest Diagnostic Tester software (v. 10.1a and 10.2a), Calibration Update Wizard (v. 6.0), and calibration files.
- The previous TSIB should be discarded.

Introduction

Electronic Control Unit (ECU) is a Lexus term used to describe integrated computerized devices responsible for managing the operation of a system or sub–system. For the purposes of this bulletin, the term "ECU" is used as a generic label for the following SAE J1930 standard references:

- Powertrain Control Module (PCM)
- Engine Control Module (ECM)
- Transmission Control Module (TCM)
- · or any other Lexus specific control unit

Flash reprogramming allows the ECU software to be updated for changes in vehicle calibrations without removing the ECU from the vehicle. Flash calibration updates for specific vehicle models/ECUs will be released as field fix procedures described in individual service bulletins. This bulletin details the ECU flash reprogramming process and the applications within the Technical Information System (TIS) and the Lexus Diagnostic Tester used for reprogramming.

Flash calibration updates can only be applied to the vehicle/ECU combination for which they are intended. ECUs have internal security that will not allow them to be programmed with another ECU's information.

Applicable Vehicles

- 2001 (and later) model year GS 430/300, IS 300, LS 430 & LX 470 vehicles.
- 2002 (and later) model year SC 430 vehicles.
- All 2003 (and later) model year Lexus vehicles.

Parts Information

PREVIOUS PART NUMBER	CURRENT PART NUMBER	PART NAME	
N/A	00451-00001-LBL	Authorized Modifications Label	

NOTE:

Authorized Modifications Labels may be ordered in packages of 25 from the Materials Distribution Center (MDC) through the TDN Dealer Support Materials System, or by calling the MDC at 1-800-622-2033.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	_	_	-	_



Required SSTs

SPECIAL SERVICE TOOLS (SSTs)	PART NUMBER	QUANTITY	
Lexus Diagnostic Tester Kit*		01001270	1
CAN Interface Module*		01002744	1
12 Megabyte Diagnostic Tester Program Card with version 10.2a Software (or later)*		01002593-005	1
Midtronics Battery Tester*		00002-MP815-L	1

^{*} Essential SSTs.

NOTE:

Additional Diagnostic Tester Kits, CAN Interface Modules, Program Cards or SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.

Process Overview

ECU Flash Reprogramming is a 4-step process:

- Locate the desired calibration file on TIS (Technical Information System).
 Calibration files may be found in two areas:
 - a. Search by model and year for a Technical Service Information Bulletin addressing a specific product issue.
 - b. Search by model under the ECU Flash Reprogramming section.
- 2. Download the calibration file from TIS to the Diagnostic Tester.

The Calibration Update Wizard (CUW) is an application on TIS which downloads calibration files from TIS to the Diagnostic Tester Program Card. This step is only required when the calibration file is not currently stored on the Diagnostic Tester Program Card.


- 3. Reprogram the vehicle ECU with the Diagnostic Tester.
 - Diagnostic Tester Software now incorporates a function to update a vehicle's ECU calibration through flash reprogramming.
- 4. Confirm successful flash update and affix calibration update sticker.

Modifications to ECU calibration files must be recorded and properly displayed on the vehicle using the calibration update sticker.

Process Overview (Continued)


NOTE:

The calibration file contains the Calibration ID number(s) for a specific vehicle ECU (see Figure 1).

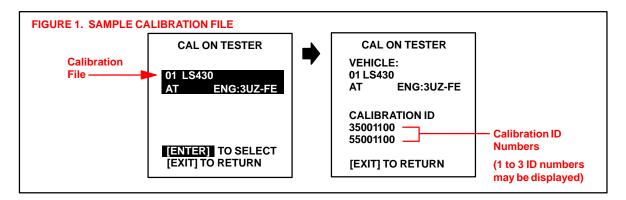

NOTE:

The total number of Calibration ID numbers corresponds to the number of reprogrammable processors in the ECU (see Figure 2).

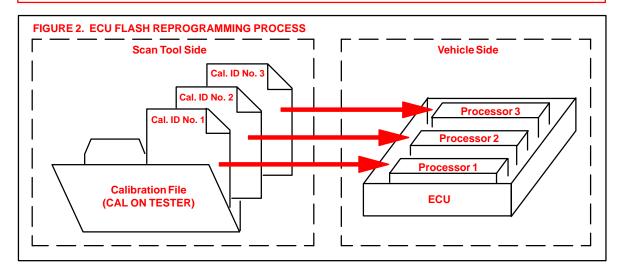

Operation Procedure


The following steps in this bulletin describe how to properly flash reprogram an ECU.

LOCATE CALIBRATION FILE

1. Locate calibration file on TIS.

Calibration files may be found in two areas (see Figure 3):

- A. Search by model and year for a Technical Service Information Bulletin addressing a specific Product issue.
 - Within the TSIB, click on the link for the calibration file.
- B. Search by model under the ECU Flash Reprogramming Section.
 - Under the ECU Flash Reprogramming section on TIS, a drop-down list of the latest calibration files will be displayed.
- C. Proceed to step 2 for instructions on how to download the calibration file from TIS to the Diagnostic Tester Program Card.

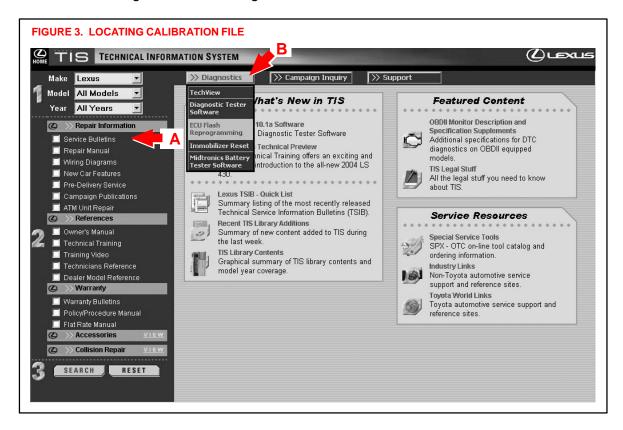


2. Download the calibration file to the Diagnostic Tester.

The Calibration Update Wizard (CUW) is an application on TIS which downloads calibration files from TIS onto the Diagnostic Tester Program Card.

NOTE:

Before you begin, ensure that the Diagnostic Tester is equipped with software version 8.0a, or later. Only a 12 MB program card (P/N 01002593-005) may be used for this process.

A. Before downloading a new calibration file from TIS, check the current calibration files stored on the Diagnostic Tester Program Card by following the screen flow below (Figure 4).

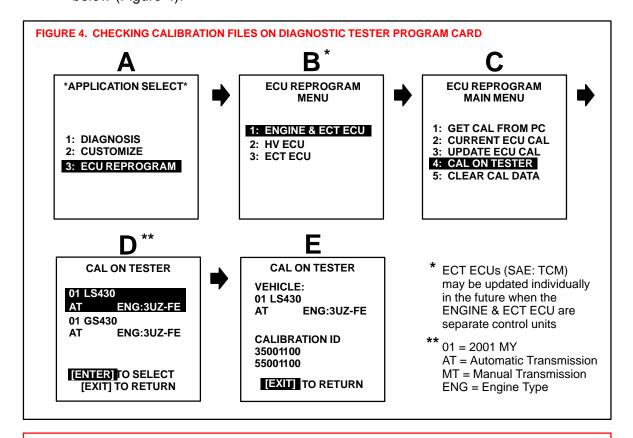


NOTE:

- Screen D may be blank if no calibrations are stored on the Diagnostic Tester Program Card.
- If the desired calibration file is already on the Diagnostic Tester, proceed to Step 3 (page 16 of this bulletin).
- A maximum of two calibration files may be loaded on the tester at one time with Diagnostic Tester software version 10.2a and later. Prior versions may store up to four calibration files.


Operation Procedure (Continued)

DOWNLOAD FILE TO TESTER B. You have the option to delete calibrations off the tester before downloading a new calibration. The CUW also provides this option if there is not enough memory for the new calibration. To delete one or all of the calibrations, follow the screen flow below (Figure 5).

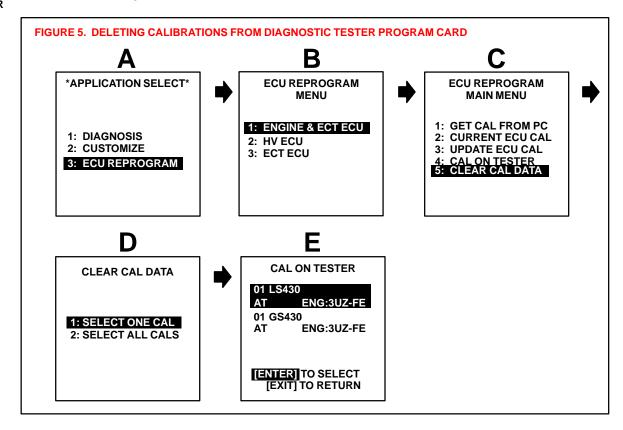

C. If this is the first time you have downloaded a calibration file from TIS to the Diagnostic Tester Program Card, you MUST first install the latest version of the Calibration Update Wizard (CUW) onto your TIS workstation PC, as shown in Figure 6.

This step is also required if you are using a version of CUW earlier than version 6.0. CUW 6.0 is the only version compatible with Diagnostic Tester software version 10.2a and later. If necessary, select the link to the TIS Diagnostic Applications Installer and follow the on–screen prompts to install or reinstall CUW.

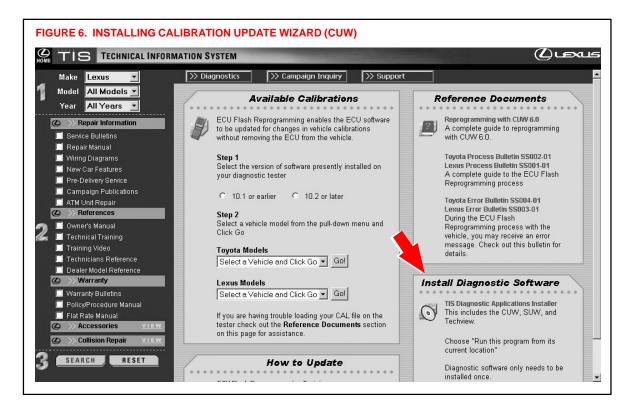


Operation Procedure (Continued) DOWNLOAD

FILE TO TESTER


D. The Calibration Update Wizard (CUW) launches automatically when a calibration file link is selected (or clicked). Verify that the CUW version is 6.0 or higher. If not, refer to the Note below. The CUW will guide you through the steps to download the calibration file to the Diagnostic Tester Program Card. Click **NEXT** on the first screen (Figure 7).

NOTE:

If the CUW does not launch, or the version is older than 6.0, install Diagnostic Software (TIS Diagnostic Applications Installer). Specific installation instructions (Reprogramming with CUW 6.0) are located under Diagnostics \rightarrow ECU Flash Reprogramming (Figure 6).

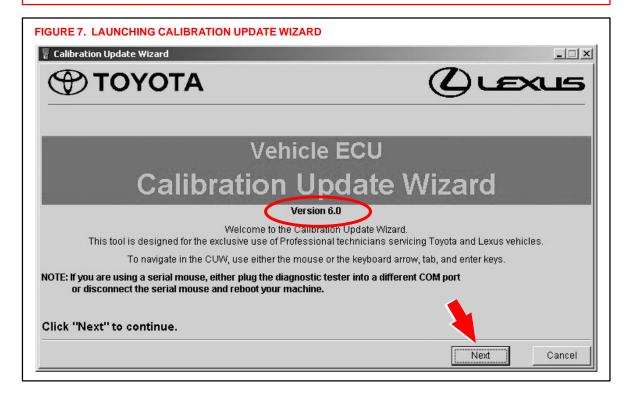

E. Confirm the Diagnostic Tester has the appropriate software for the type of calibration file that was downloaded.

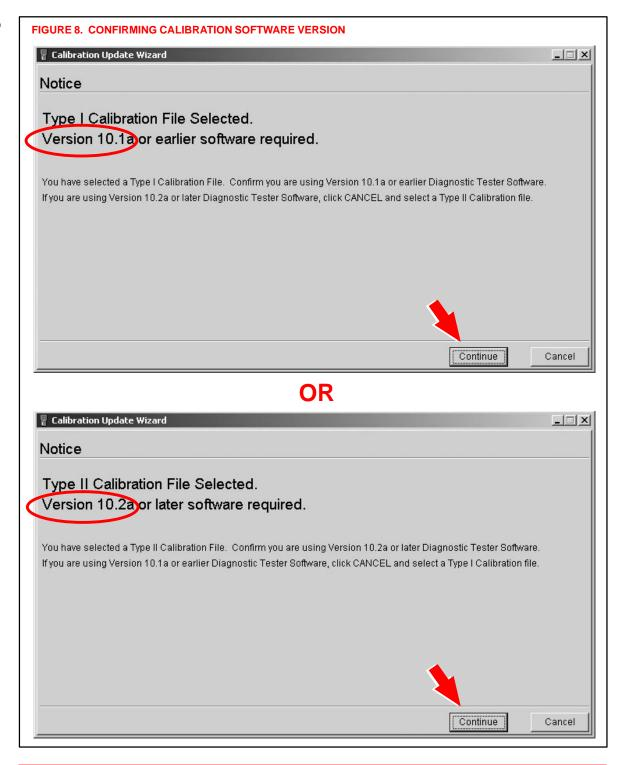


NOTE:

The calibration type is specific to the software version loaded on your Diagnostic Tester. If you selected the wrong version when downloading the calibration file, you will receive an error when attempting to install the file on the Diagnostic Tester.

Operation Procedure (Continued)

DOWNLOAD FILE TO TESTER F. Confirm the Diagnostic Tester software version and connections to the TIS workstation are correct.

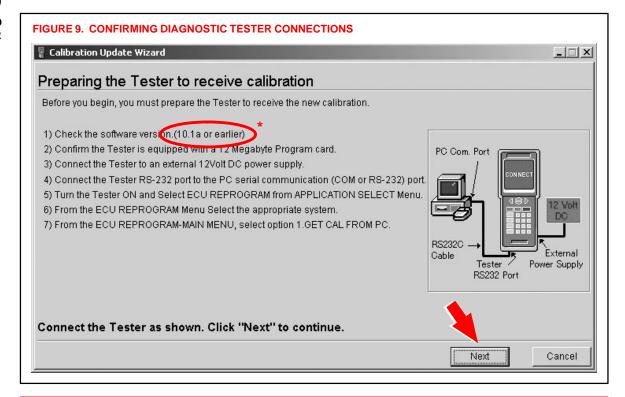

* NOTE:


This screen displays the required version of Diagnostic Tester software that is compatible with the selected calibration file, and the other required steps to properly connect the Diagnostic Tester to your PC.

- Type I calibration files are only compatible with software version 10.1a and older versions.
- Type II calibration files are only compatible with software version 10.2a and newer versions.

Operation **Procedure** (Continued) **DOWNLOAD**

FILE TO TESTER


- G. Place the Diagnostic Tester in the "GET CAL FROM PC" mode to receive the calibration file (Figure 10).
 - Click **NEXT** on the TIS workstation. Once communications begin between the PC and the Diagnostic Tester, the Diagnostic Tester display will flash CONNECTED.

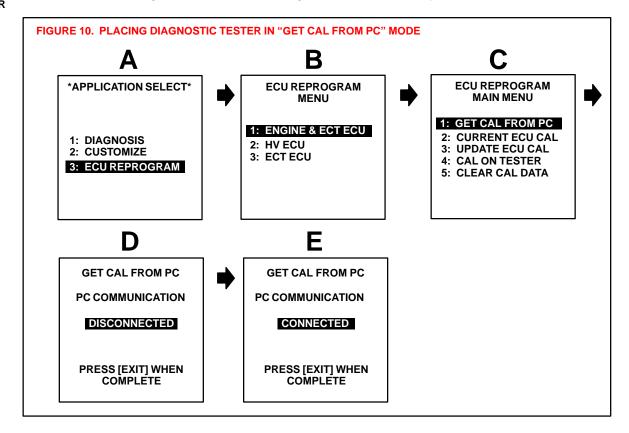


H. The CUW determines if there is enough memory to store the calibration file on the Diagnostic Tester Program Card. If there is insufficient memory, the CUW will ask you to select the calibration file(s) to delete from the Diagnostic Tester Program Card to make room for the new calibration file. If necessary, check the calibration file(s) to delete, as shown in Figure 11. Click **DELETE**.

NOTE:


If there is adequate memory to store the calibration file, skip to Step J, page 13.

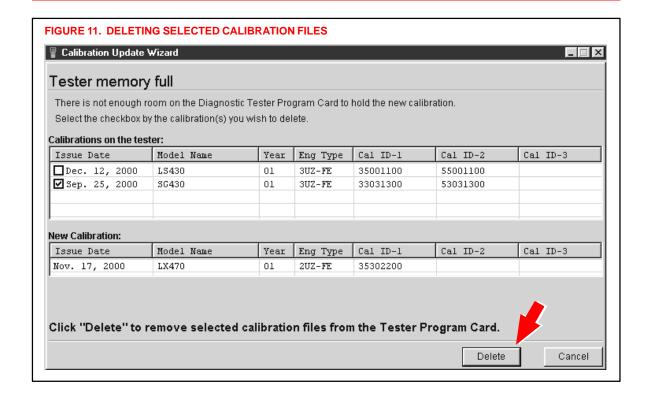

I. The CUW will now delete the calibration file(s) selected (see Figure 12).

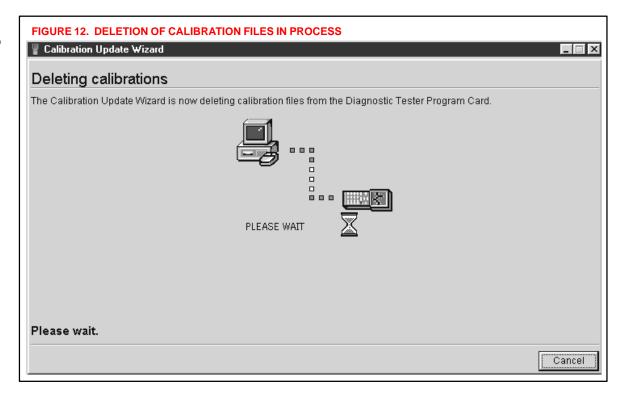


J. The top half of the CUW screen displays the calibrations currently stored on the Diagnostic Tester Program Card. The bottom half of the screen displays the new calibration to be loaded onto the Diagnostic Tester Program Card (see Figure 13). Click **NEXT** to continue the process.

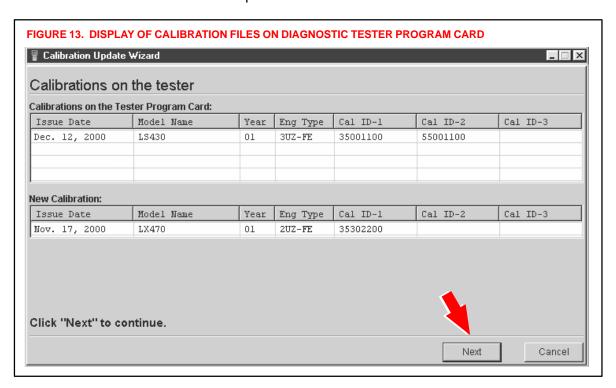


Procedure (Continued)

Operation


DOWNLOAD FILE TO TESTER K. Confirm the calibration file to be sent to the Diagnostic Tester Program Card (Figure 14). Click **SEND**.

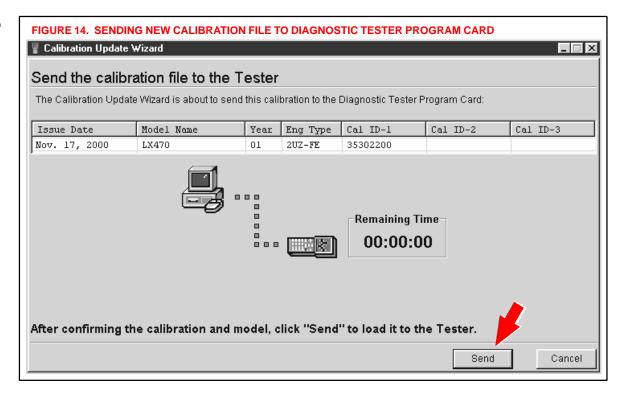

L. The calibration file will now be downloaded to the Diagnostic Tester Program Card. This process takes approximately 2-6 minutes (see Figure 15).

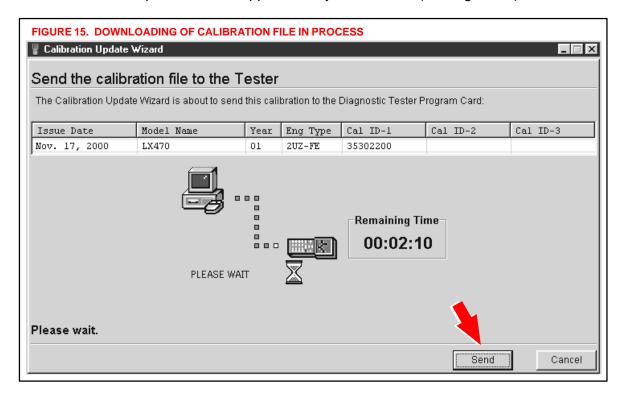

M. The CUW will prompt when the calibration file is completely downloaded. Click **OK** to close the CUW (Figure 16).

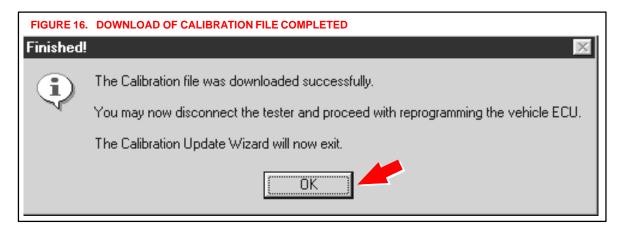

NOTE:

With the calibration file loaded on the Diagnostic Tester Program Card, it is not necessary to repeat the above steps to reprogram a different vehicle needing the <u>same</u> calibration file. The steps above are only required when a new calibration file must be loaded onto the Diagnostic Tester Program Card.

The Diagnostic Tester now has the calibration file stored and you may proceed to the next step to reprogram the vehicle ECU.

Operation Procedure (Continued) REPROGRAM ECU WITH TESTER 3. Reprogram the vehicle ECU with the Diagnostic Tester.

NOTICE:

Errors during the flash reprogramming process can permanently damage the vehicle ECU. Minimize the risks by following the steps below.

- Battery voltage <u>MUST NOT FALL BELOW 11.4 volts</u> during reprogramming.
- Confirm battery voltage is higher than 11.4 volts, but be sure voltage <u>DOES NOT RISE ABOVE 16.0 volts</u> during reprogramming.
- Turn off all electrical accessories (e.g. Audio system, A/C, interior lights, DRL, etc.).
- Do not add to or significantly change the vehicle's electrical load while reprogramming.
- Confirm the hood is open and ensure under hood temperatures do not exceed 158°F.
- Confirm cable connections between the vehicle and Diagnostic Tester are secure. (Reference TSIB No. SS003–01, "ECU Flash Reprogramming Error Message.")
- Do not disconnect or turn off the Diagnostic Tester or the vehicle ignition during reprogramming.
- · Set the parking brake.
- Complete ALL flash calibration updates provided for each ECU.

If the battery's state of charge or capacity are in question, test with SST No. 00002–MP815–L, "Midtronics Battery Tester," and follow TSIB No. PG009–02, "Battery Maintenance for In–Stock Vehicles & Pre–Delivery."

To ensure stable battery voltage, a battery charger may be connected during reprogramming if:

- Voltage does not fall below 11.4 volts.
- Voltage does not rise above 16.0 volts.
- Setting is on SLOW charge and <u>not</u> BOOST.
- A. Connect the Diagnostic Tester to the vehicle and select *CURRENT ECU CAL* from the *ECU REPROGRAM MAIN MENU*. Determine the vehicle's current ECU calibration. (See Figure 17.)


NOTE:

The vehicle may contain up to 3 separate calibration ID numbers. In the example shown below, the vehicle ECU contains only 2 calibration IDs.

FIGURE 17. DETERMINING CURRENT ECU CALIBRATION ECU REPROGRAM MAIN MENU 1: GET CAL FROM PC 2: GURRENT EGU CAL 3: UPDATE ECU CAL 4: CAL ON TESTER 5: CLEAR CAL DATA PRESS [ENTER]

Operation Procedure (Continued)

REPROGRAM ECU WITH TESTER B. Continue to update the ECU calibration file following the screen flow below (Figure 18). Details for selected screens are shown in Figure 19.

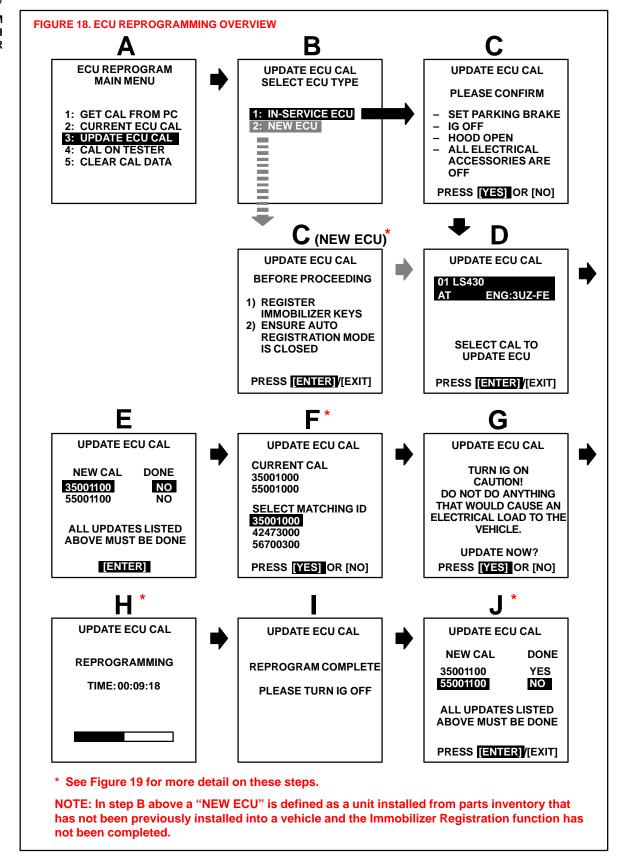

Operation Procedure (Continued)

REPROGRAM ECU WITH TESTER

NOTE:

- Each flash calibration update will take approximately 15 to 45 minutes.
- Screens E through J (Figure 18) will need to be repeated for each flash calibration update (calibration ID number).
- All updates must display "YES" to complete the entire calibration file update for the vehicle ECU.
- Failure to complete all updates may result in PERMANENT ECU DAMAGE!

FIGURE 19. ECU REPROGRAMMING DETAIL



UPDATE ECU CAL
BEFORE PROCEEDING

- 1) REGISTER IMMOBILIZER KEYS
- 2) ENSURE AUTO REGISTRATION MODE IS CLOSED

PRESS [ENTER] /[EXIT]

This screen is only displayed if attempting to reprogram a new ECU that has not yet had the Immobilizer registered. REPROGRAMMING WILL NOT BEGIN IF THE IMMOBILIZER KEYS ARE NOT REGISTERED FIRST.

- Refer to TSIB No. SS006–99, "Scantool Immobilizer Key Code Utility," for instructions on immobilizer key registration.
- Refer to Repair Manual procedure "Engine Immobilizer System Registration" for vehicles with separate Transponder and Engine ECUs.

F

UPDATE ECU CAL

CURRENT CAL 35001000 55001000

SELECT MATCHING ID

35001000 42473000 56700300

PRESS YES OR [NO]

This screen displays the current ECU calibration. Scroll through the list of matching ID numbers and select a number that matches the current ECU calibration. Press ENTER.



UPDATE ECU CAL

REPROGRAMMING

TIME: 00:09:18



It may take up to 2 minutes for the progress bar to begin moving.

J

UPDATE ECU CAL

NEW CAL DONE

35001100 55001100 YES NO

ALL UPDATES LISTED ABOVE MUST BE DONE


PRESS [ENTER] [EXIT]

Flash Calibration Update Completed = "YES" Flash Calibration Update NOT Completed = "NO" (1 to 3 updates may be displayed)

- Scroll down to the update displaying "NO" and press "ENTER" to begin the second flash sequence (see Steps E through J in Figure 18).
- If all updates display "YES", press "EXIT" to complete the reprogramming process.

Operation
Procedure
(Continued)
CONFIRM
UPDATE

- **4.** Confirm successful flash calibration update and affix calibration update sticker. Follow these steps to confirm the calibration was reprogrammed to the ECU.
 - A. The new calibration file should be displayed as the current ECU calibration file.

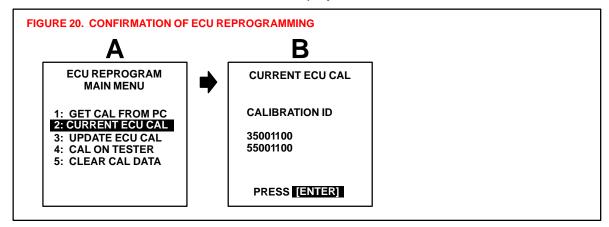

B. Using a permanent marker or ball point pen, enter the required information on the Authorized Modifications Label (Figures 21 and 22).





C. Affix this label under the hood in the location determined by the specific vehicle TSIB or Campaign.

NOTE:

Wait 60-90 seconds for ink to set before handling.